

DVD Video player

DVD756



Let's make things better.



PHILIPS

Important Note

DK

Advarsel:

Laserrudstråling ved åbning når sikkerhesafbrydere er ude af funktion. Undgå u tsættelse for stråling.

Bemærk:

Netafbryderen POWER er sekundært indkoblet og afbryder ikke strømmen fra nettet. Den indbyggede netdel er derfor tilsluttet til lysnettet så længe netstikket sidder i stikkontakten.

N

Observer:

Nettbryteren POWER er sekundært innkoplet. Den innebygdenetdelen er derfor ikke frakoplet nettet så lenge apparatet er tilsluttet nettkontakten.

S

Klass 1 laserapparat

Varning!

Om apparaten används på annat sätt än i denna bruksanvisning specificerats, kann användaren utsättas för laserstrålning, som överskrider gränsen för läserklass 1.

Observera!

Strömbrytaren POWER är sekundärt kopplad och inte bryter strömmen från nätet. Den inbyggda nät delen är därför ansluten till elnätet så länge stickproppen sitter i v ägguttaget.

SF

Luokan 1 laserlaite + Klass 1 laserapparat

Varoitus!

Laitteen käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyttäjän turvallisuusluokan 1 ylittävälle lasersäleille.

Huom.

Toiminnanvalitsin POWER on kytketty toisiopuolelle, eikä se kytke laitetta irti sähköverkosta. Sisäänrakennettu verkko-osa on kytkettynä sähköverkkoon aina silloin, kun pistoke on pistorasiassa.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works. © 1992 - 1997 Dolby Laboratories, Inc. All rights reserved.

Important Note for Users in the UK

Mains plug

This apparatus is fitted with an approved 13 Amp plug. To change a fuse in this type of plug proceed as follows:

- 1 Remove fuse cover and fuse.
- 2 Fix new fuse which should be a BS1362 5 Amp, A.S.T.A. or BSI approved type.
- 3 Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place.

If the mains plug contains a fuse, this should have a value of 5 Amp. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5 Amp.

Note: The severed plug must be disposed of to avoid a possible shock hazard should it be inserted into a 13 Amp socket elsewhere.

How to connect a plug

The wires in the mains lead are coloured with the following code: blue = neutral (N), brown = live (L).

As these colours may not correspond with the colour markings identifying the terminals in your plug, proceed as follows:

- Connect the blue wire to the terminal marked N or coloured black.
- Connect the brown wire to the terminal marked L or coloured red.
- Do not connect either wire to the earth terminal in the plug, marked E (or e) or coloured green (or green and yellow).

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the two wires.

Copyright in the U.K.

Recording and playback of material may require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.

English 9

Français 31

Español 54

Deutsch 77

Nederlands 100

Italiano 122

Svenska 144

Dansk 166

Suomi 188

Português 210

Ελληνικά 232

- English
- Français
- Español
- Deutsch
- Nederlands
- Italiano
- Svenska
- Dansk
- Suomi
- Português
- Ελληνικά

General Information

The region code for this set is 2.



Since it is usual for DVD movies to be released at different times in different regions of the world, all players have region codes and discs can have an optional region code. If you load a disc of a different region code to your player, you will see the region code notice on the screen. The disc will not play, and should be unloaded.

NOTE:
PICTURES SHOWN MAYBE DIFFERENT BETWEEN COUNTRIES.

CAUTION
WARNING LOCATION: INSIDE ON LASER COVERSIELD OR THE BACKPLATE OF SET

NEVER MAKE OR CHANGE CONNECTIONS WITH THE POWER SWITCHED ON.

CE The DVD-VIDEO player is in conformity with the EMC directive and low-voltage directive.

TruSurround and the SRS symbol are trademarks of SRS Labs., Inc. TruSurround technology is manufactured under license from SRS Labs., Inc.

TruSurround™
by **SRS** (●)®

For Customer Use:

Read carefully the information located at the bottom of your DVD-VIDEO player and enter below the Serial No. Retain this information for future reference.

Model No. DVD-VIDEO

Serial No. _____

Laser safety

This unit employs a laser. Due to possible eye injury, only a qualified service person should remove the cover or attempt to service this device.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

LASER

Type	Semiconductor laser GaAlAs
Wave length	650 nm (DVD) 780 nm (VCD/CD)
Output Power	7 mW (DVD) 10 mW (VCD/CD)
Beam divergence	60 degree

CAUTION

VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN AVOID EXPOSURE TO BEAM

ADVARSEL

SYNLIG OG USYNLIG LASERSTRÅLING VED ÅBNING
UNDGÅ UDSÆTTELSE FOR STRÅLING

ADVARSEL

SYNLIG OG USYNLIG LASERSTRÅLING NÅR DEKSEL
ÅPNES UNNGÅ EKSPONERING FOR STRÅLEN

VARNING

SYNLIG OCH OSYNLIG LASERSTRÅLNING NÄR
DENNA DEL ÄR ÖPPNAD BETRakta EJ STRÅLEN

VARO!

AVATTAESSA OLET ALTTIINA NÄKYVÄLLE JA
NÄKYMÄTTÖMÄLLE LASER SÄTEILYLLE. ÄLÄ KATSO
SÄTEESEEN

VORSICHT

SICHTBARE UND UNSICHTBARE LASERSTRAHLUNG
WENN ABDECKUNG GEÖFFNET NICHT DEM
STRAHL AUSSETZEN

DANGER

VISIBLE AND INVISIBLE LASER RADIATION WHEN
OPEN AVOID DIRECT EXPOSURE TO BEAM

ATTENTION

RAYONNEMENT LASER VISIBLE ET INVISIBLE EN CAS
D'OUVERTURE EXPOSITION DANGEREUSE AU
FAISCEAU

Introduction

Philips DVD-Video Introduction	6
Unpacking	6
Safety Information	6
Cleaning Discs	6

Functional overview

Front panel	7
Rear panel	8
Display	9
Remote control	10

On-screen display information

Menu bar/Status window	11
Status window icons	11
Default screen	11
Temporary feedback field icons	11

Preparation

General notes	12
Connecting to a TV	12
Connecting to optional equipment	12-13
Remote Control battery installation	13
NTSC/PAL Settings	13
General explanation	13-14
Turning on the power	14
Initial Setup	14
Personal Preferences	15-16
Access Control: child lock	16
Access Control: parental control	17

Operation

Loading discs	18
Playing a DVD-Video disc	18
Playing a Video CD	18
General Features	18-20
Special DVD features	20-21
Special VCD features	21
Playing an Audio CD	21-22
FTS Program	22

Before requesting service

Before requesting service	23
---------------------------------	----

Specifications

Specifications	24
----------------------	----

Introduction

Philips DVD-Video Introduction

Your Philips DVD-Video player will play digital video discs conforming to the universal DVD-Video standard. With it, you will be able to enjoy full-length movies with true cinema picture quality, as well as stereo or multi-channel sound (depending on the disc and your playback setup). The unique features of DVD-Video, such as selection of sound track, subtitle languages and different camera angles (again depending on the disc), are all included. What's more, Philips Child Lock lets you decide which discs your children will be able to see.


In addition to DVD-Video discs, you will be able to play all Video CDs and Audio CDs (including finalized CD Recordable and CD Rewritable).

You will find the On-Screen Display, player display, and remote control make the player easy to use. This manual provides all the information you will need, so read on!

DVD-Video

You will recognize DVD-Video discs by the logo shown.

Depending on the material on the disc (a movie, video clips, a drama series, etc.) the disc may have one or more Titles.

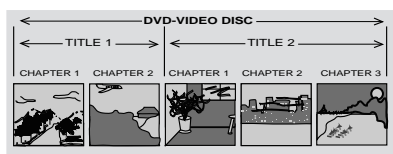

Video CD

You will recognize Video CDs by the logo shown.



Audio CD

Audio CDs contain music tracks only. You will recognize Audio CDs by their logo which is shown.



Unpacking

First check and identify the contents of your DVD-Video player package.

You should have the following items.

- DVD-Video player
- Remote Control with batteries
- AC power cord
- Audio cable
- Video cable
- SCART cable
- Instructions for use

If any item is damaged or missing, contact your retailer or Philips.

Keep the packaging materials; you may need them to transport your player in the future.

Safety Information


- Do not expose the system to excessive moisture, rain, sand or heat sources.
- Place the player on a firm, flat surface.
- Keep the player away from domestic heating equipment and direct sunlight.
- In a cabinet, allow about 2.5 cm (1 inch) of free space all around the player for adequate ventilation.
- If the DVD-Video player cannot read CDs/DVDs correctly, use a commonly available cleaning CD/DVD to clean the lens before taking the DVD-Video player to be repaired. Other cleaning methods may destroy the lens. Always keep the tray closed to avoid dust on the lens.
- The lens may cloud over when the DVD-Video player is suddenly moved from cold to warm surroundings. Playing a CD/DVD is not possible then. Leave the DVD-Video player in a warm environment until the moisture evaporates.

Cleaning discs


Some problems occur because the disc inside the player is dirty. To avoid these problems clean your discs regularly, in the following way:

- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the center out.


Caution: Do not use solvents such as benzene, thinner, commercially available cleaners, or anti-static spray intended for analog discs.

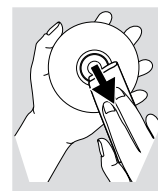

Front panel

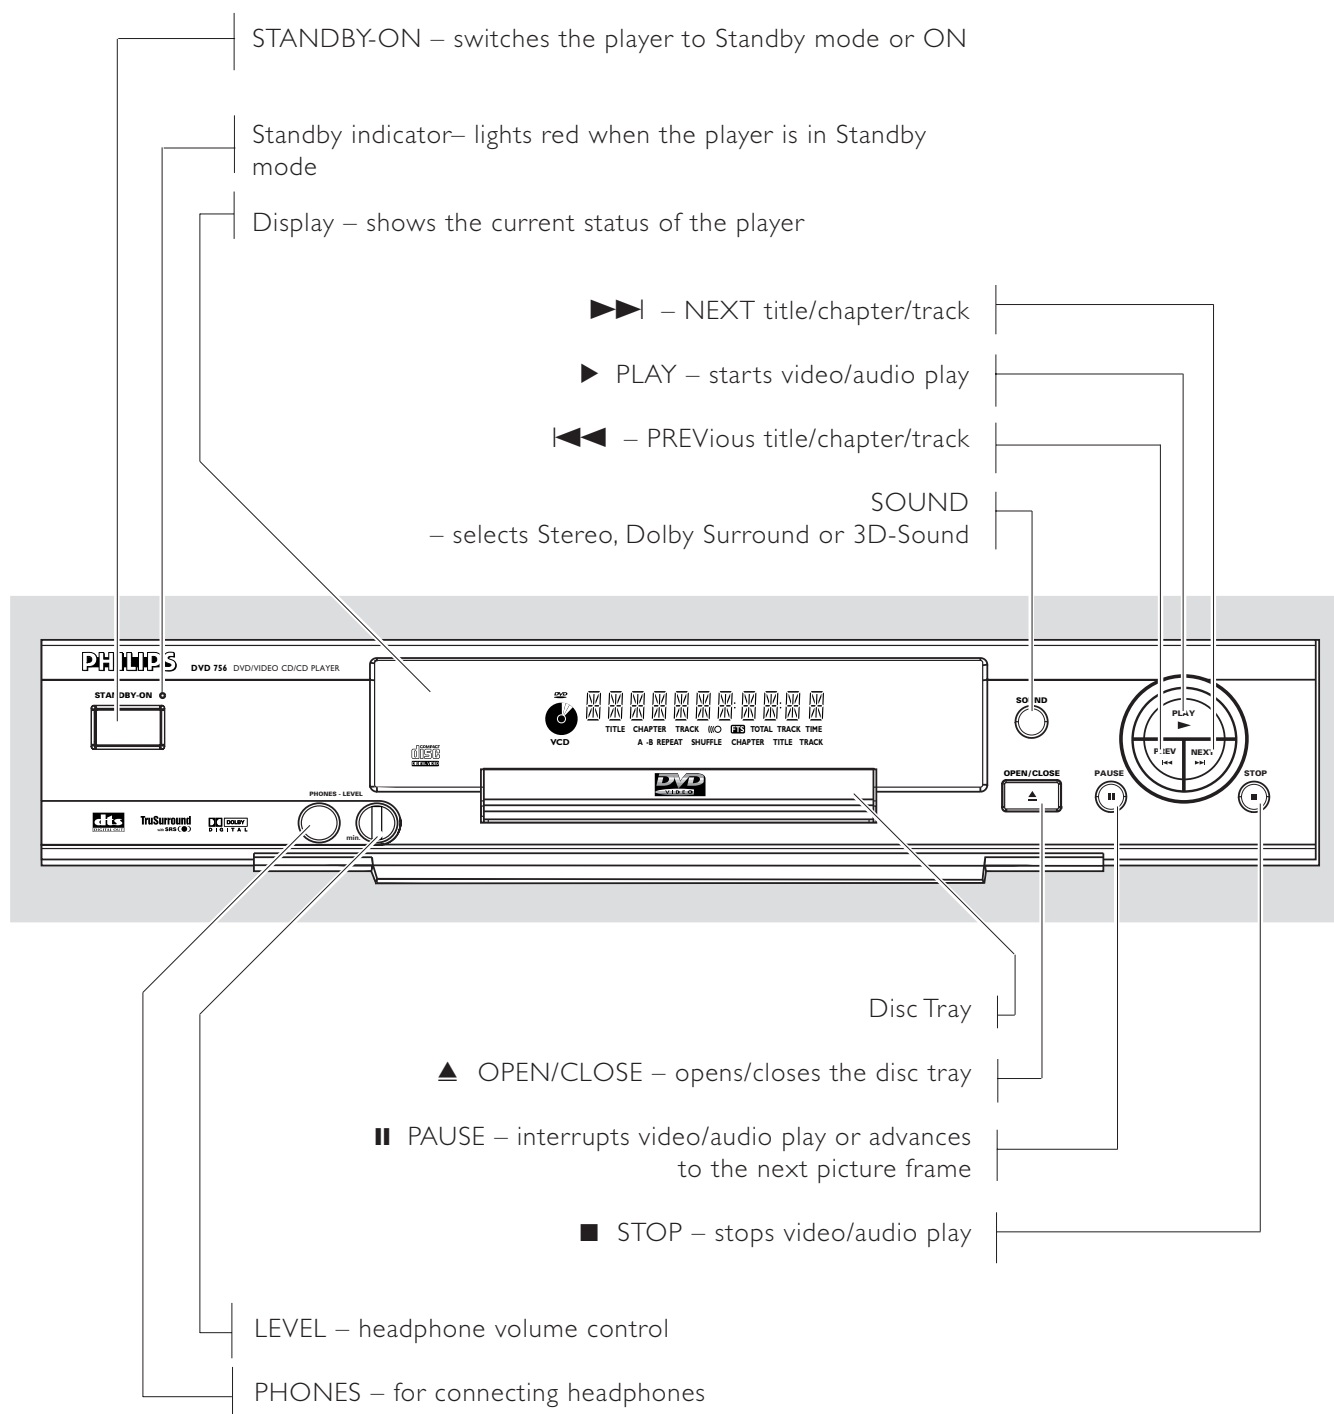


Rear panel

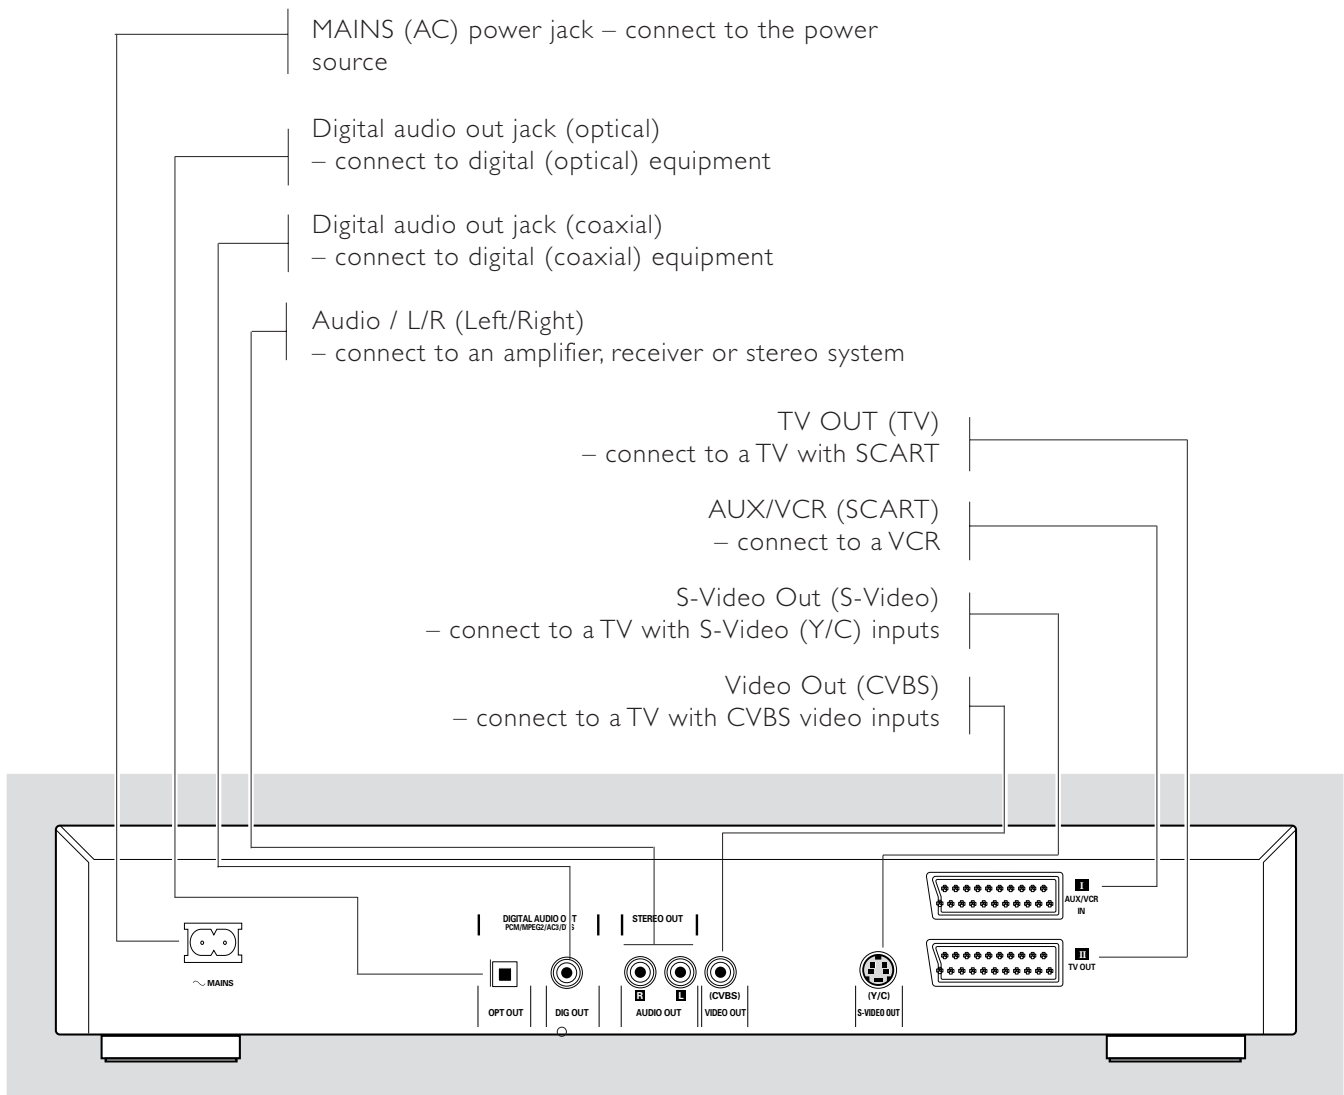

Caution: Do not touch the inner pins of the jacks on the rear panel connectors. Electrostatic discharge may cause permanent damage to the unit.

Display

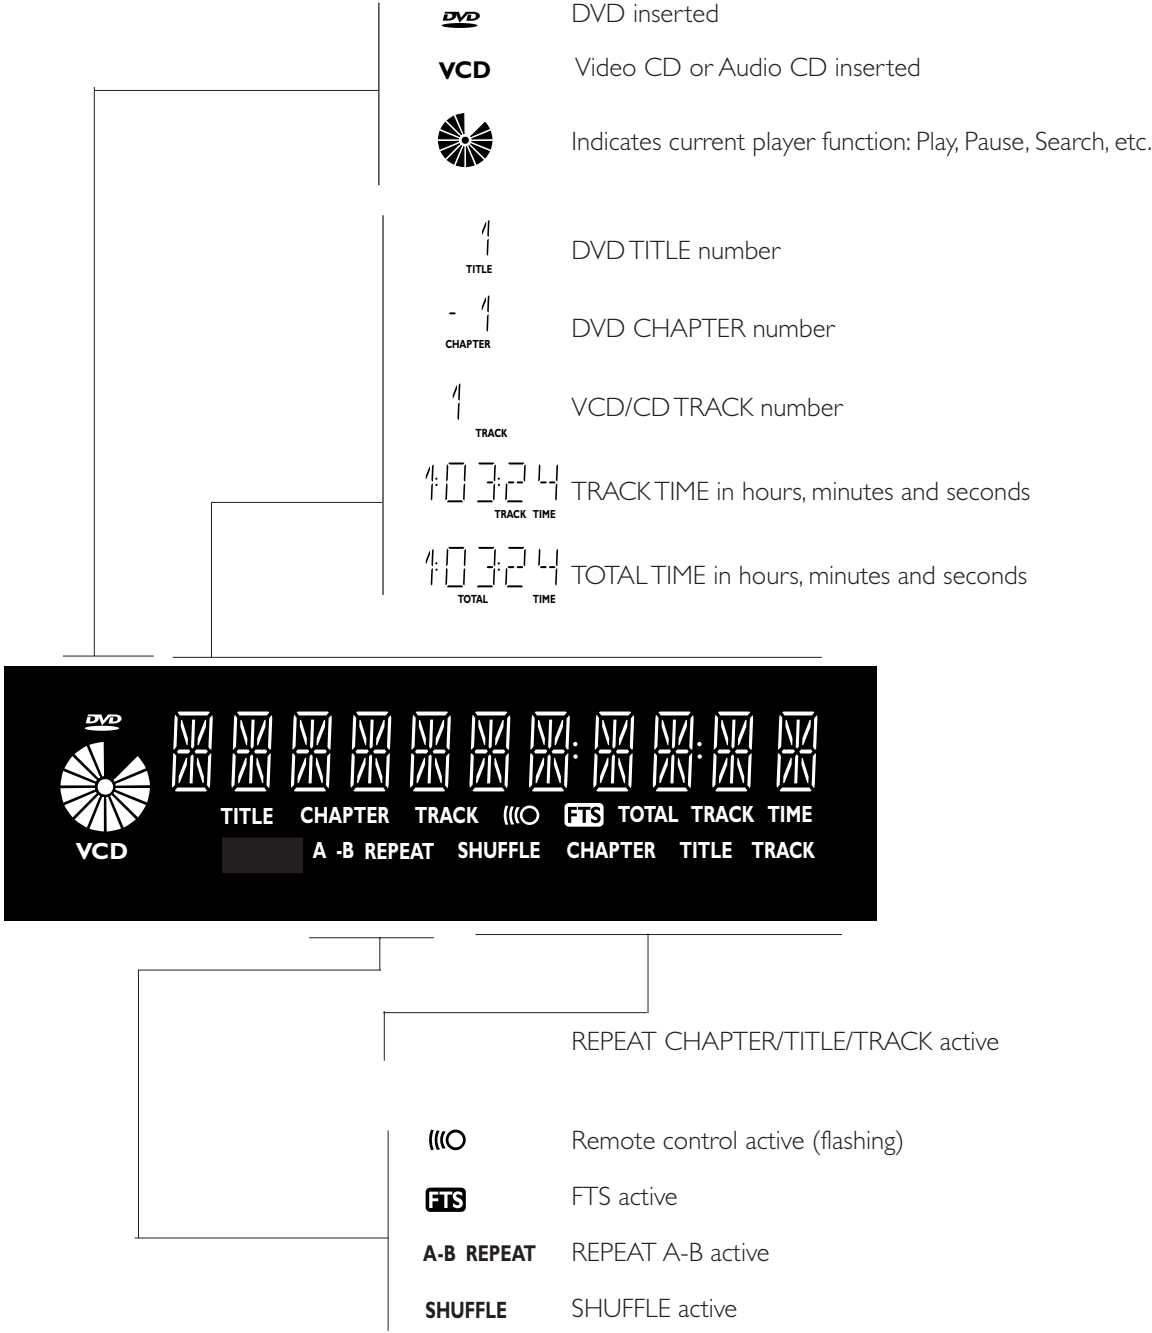

Remote control

0-9 numerical key pad

RETURN

– go back to previous menu

OK

– acknowledge menu selection



– (left/right/up/down) cursor movement



– search backward* / previous chapter or track




– stop



– play



– search forward* / next chapter or track

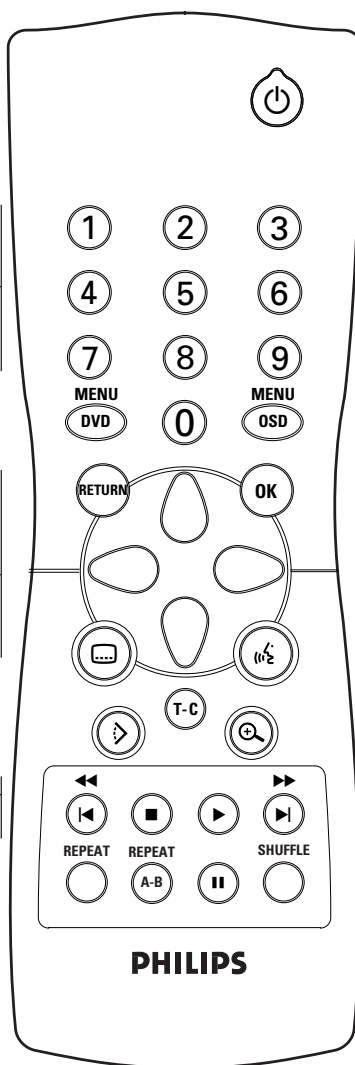

STANDBY-ON (ON/OFF)

MENU DVD

– access menu of a DVD

MENU OSD

– access or remove On-screen display
– bit rate indicator*



– subtitle language selector



– audio language selector



– select title



– select chapter



– enlarge video image



– select DVD camera angle

REPEAT

– repeat chapter, track, title, disc

REPEAT A-B

– repeat sequence

SHUFFLE

– playback tracks in random order




– pause playback temporarily / frame-by-frame playback

* Press key for about 2 seconds

Menu bar/Status window

- Personal Preferences
- Title/Track
- Chapter/Index
- Audio language
- Subtitle language
- Angle
- Zoom
- Color Settings (Smart Picture)
- Video Program
- Sound
- Picture by Picture
- Slow motion
- Fast motion
- Time search

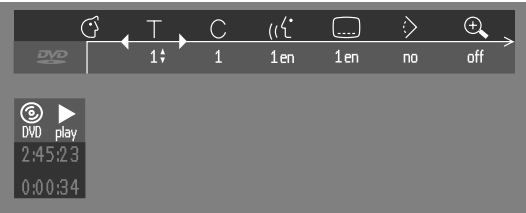

Status window icons

The status window displays the current status of the player and appears with the first part of the menu bar. (You must activate this in the Features Menu - see Personal Preferences for details).



General

- Disc type
- no disc
 - DVD
 - VCD
 - error
- Tray status
- opening
 - opening
 - opening
 - opened
 - closing
 - closing
 - closing
 - blocked

 
Default screen

The default screen is displayed when the player is in STOP mode. It may contain a 'Status Window' and a 'Temporary Feedback Field'. This gives information concerning prohibited actions, playback modes, available angles, etc.



Temporary Feedback Field icons

- repeat Repeat All
- title Repeat Title
- track Repeat Track
- chapter Repeat Chapter
- shuffle Shuffle
- shuffle Shuffle Repeat
- A- Repeat A to end
- A-B Repeat A-B
- Angle
- locked Child Lock On
- safe Child Safe
- resume Resume
- Action prohibited



Preparation

General notes

- Depending on your TV and other equipment you wish to connect, there are various ways you could connect the player. Possible connections are shown in the following drawings.
- Please refer to the manuals of your TV, VCR, Stereo System or other devices as necessary to make the best connections.
- Do not connect your DVD-player via your VCR. The video quality could be distorted by the copy protection system.
- For better sound reproduction, connect the player's audio out jacks to the audio in jacks of your amplifier; receiver, stereo or A/V equipment. See 'Connecting to optional equipment'.

Caution: Do not connect the player's audio out jack to the phono in jack of your audio system.

Connecting to a TV

- 1 Connect the SCART to the corresponding connector on the TV using the SCART cable supplied **(A)**.


If your TV is not equipped with a SCART you can select one of the following alternative connections:

S-Video (Y/C) connection

- 1 Connect the S-Video jack on the DVD-player to the S-Video in jack on the TV using an optional S-Video cable **(B)**.
- 2 Connect the audio Left and Right out jacks to the audio left/right in jacks on the TV **(D)**.

Video CVBS connection

- 1 Connect the Video out (CVBS) jack to the video in jack on the TV using the video cable supplied **(C)**.
- 2 Connect the audio Left and Right out jacks to the audio left/right in jacks on the TV **(D)**.

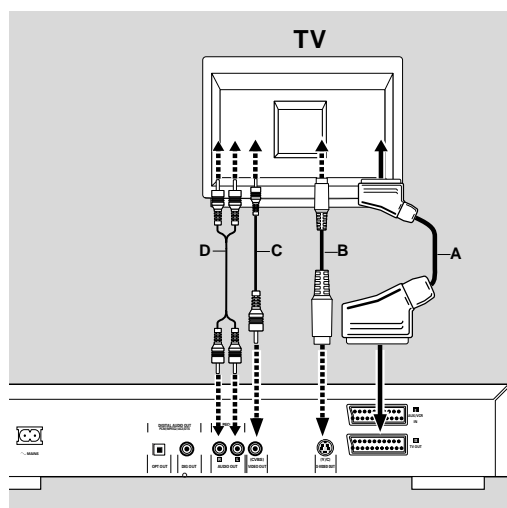

Connecting to optional equipment

Connecting to an amplifier equipped with two channel analog stereo

- 1 Connect the audio Left and Right out jacks of the DVD player to the audio left and right in jack on your amplifier; receiver or stereo system, using the optional audio cable **(E)**.

Connecting to an amplifier equipped with two channel digital stereo (PCM)


- 1 Connect the player's digital audio out jack (optical **G** or coaxial **F**) to the corresponding in jack on your amplifier. Use an optional digital (optical **G** or coaxial **F**) audio cable.
- 2 You will need to activate the player's digital output (see 'Personal Preferences').

Connecting to an A/V receiver equipped with a multi-channel decoder (Dolby Digital™ (AC-3), MPEG 2 and DTS)

Digital Multi-channel sound


Digital multi-channel connection provides the best sound quality. For this you need a multi-channel A/V receiver that supports one or more of the audio formats supported by your DVD player (MPEG 2, Dolby Digital™ (AC-3) and DTS). Check the receiver manual and the logos on the front of the receiver.

- 1 Connect the DVD player's digital audio output (optical **G** or coaxial **F**) to the corresponding input on the receiver using an optional digital (optical **G** or coaxial **F**) audio cable.
- 2 You will need to activate the player's digital output (see 'Personal Preferences').

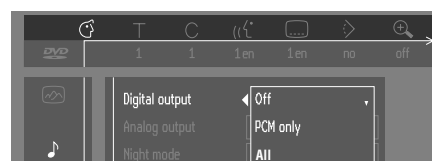

Note:

- If the audio format of the digital output does not match the capabilities of your receiver, the receiver will produce a strong, distorted sound or no sound at all.
- The selected audio format of the DVD is displayed in the Status Window when the Menu OSD is activated or Audio button is activated.
- Six Channel Digital Surround Sound via digital connection can only be obtained if your receiver is equipped with a Digital Multi-channel decoder.
- To see the selected audio format of the current DVD in the Status Window, press the MENU OSD or the Audio Language selector button.

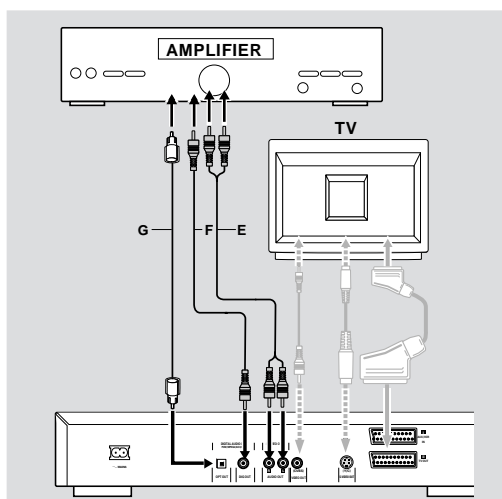

Cinemalink (on SCART)

This DVD player is equipped with cinemalink feature (from Philips) which allows a more complete control of your home audio/video (AV) equipment.

Cinemalink interconnection plug & play will enable the AV system to recognise the users intention and automatically switch the necessary controls or input source accordingly. This will reduce the necessity of having multiple control inputs for all AV equipments (eg. TV and Amplifier).

Connecting to an amplifier equipped with Dolby Surround™

Dolby Surround sound

- 1 Connect the player to the TV, then connect the player's audio Left and Right out jacks to the corresponding in jacks on the Dolby Surround™ Audio/Video receiver; using the audio/video cable supplied (D).

If your amplifier is equipped with a Dolby Digital™ decoder,

- Connect the player as described in 'Connecting to an A/V receiver with multi-channel decoder'.

If your TV is equipped with a Dolby Surround™ decoder,


- Connect the player to the TV as described in 'Connecting to a TV'.

Remote control battery installation

Loading the batteries

- 1 Open the battery compartment cover.
- 2 Insert batteries as indicated inside the battery compartment.
- 3 Close the cover.

Caution: Do not mix old and new batteries. Never mix different types of batteries (standard, alkaline, etc.)

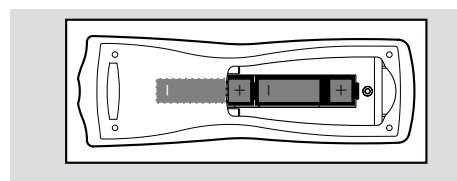

NTSC/PAL Settings

You can switch the NTSC/PAL setting of the DVD player to match the video signal of your TV. This setting only affects the television's on-screen display that shows the stop and setup modes. You may select either NTSC or PAL. To change the DVD player setting to PAL or NTSC, follow the steps below.

- 1 Unplug the DVD player from the mains.
- 2 Press and hold ■ and ►►I on the front of the DVD player. While holding ■ and ►►I, plug in the mains.
- 3 After PAL or NTSC appears on the display panel of the DVD player; release ■ and ►►I at the same time. The PAL or NTSC that appears on the display panel indicates the current setting.
- 4 To change the setting, press ►►I within three seconds. The new setting (PAL or NTSC) will appear on the display panel.

General explanation

About this manual


This manual gives the basic instructions for operating this DVD player. Some DVDs require specific operation or allow only limited operation during playback. In these cases, the player may not respond to all operating commands. When this occurs, please refer to the instructions contained with the DVD. When the symbol ✕ appears on the TV screen, the operation is not permitted by the player or the disc.

Remote control operation

- Unless otherwise stated, all operations can be carried out with the remote control. Always point the remote control directly at the player; making sure there are no obstructions in the path of the infrared beam. When there are corresponding keys on the front panel of the player; they can also be used.


Menu bar operation

- A number of operations can be carried out via the menu bar on the screen. The menu bar can be accessed by pressing any of the following keys on the remote control: MENU OSD, T-C, Angle, Audio Language, Subtitle Language and Zoom.
- Pressing MENU OSD while the menu bar is displayed will clear the menu bar from the screen.
- When selecting an item in the menu bar, the selected item will be highlighted and the appropriate cursor keys to operate this item will be displayed below the icon.
- < or > indicates that more items are available at the left/ right of the menu bar. Press ◀ or ▶ to select these items.

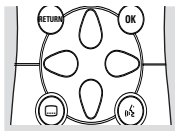

Turning On the power

- 1 Switch on the TV and select the video input channel for your DVD-Video player.
- 2 Press STANDBY-ON button.

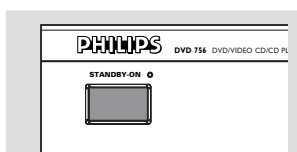

Initial Setup (Virgin Mode)

General

In 'Initial Setup' you may have to set your preferences for some of the player's features. *(not applicable for all models)*

Operation

After switching on the player for the very first time, the 'Initial Setup Screen' will appear. The menu for the first item to be set is displayed and the first option is highlighted.

- Use the ▼▲ keys to go through the options in the menu. The icon of the selected option will be highlighted.
- Use OK to confirm your selection and to go to the next menu.

Note:

- Preferences have to be set in the order in which the item menus will appear on the screen.
- The 'Initial Setup' screen will only disappear after the settings for the last item have been confirmed.
- If any keys other than ▼▲ or OK are pressed, ✕ will appear on the screen.
- If the player is switched off while setting personal preferences, all preferences have to be set again after switching the player on again.

The following items may have to be set in Initial Setup:

Menu language

You can choose from different languages. The On Screen Menus will be displayed in the language you choose.

Audio language

You can choose from different languages. The sound will be in the language you choose if it is available on the disc in play. If the language you select is not available, speech will revert to the first spoken language on the disc.

Subtitle language

You can choose from different languages. The subtitles will be in the language you choose if it is available on the disc in play. If the language you select is not available, subtitles will revert to the first subtitle language on the disc.



TV Shape

If you have a wide screen (16:9) TV, select 16:9.

If you have a regular (4:3) TV, select 4:3.

If you have a 4:3 TV, you can also select between:

Letterbox for a 'wide-screen' picture with black bars top and bottom, or Pan Scan, for a full-height picture with the sides trimmed. If a disc has Pan Scan, the picture then moves (scans) horizontally to keep the main action on the screen.

Country

Select your country. This is used as input for the 'Parental Control' feature (see 'Access Control').


Note:

- All these items may have to be set during 'Initial Setup'. After that, they can always be changed in the Personal Preferences Menu.

Personal Preferences

You can set your personal preferences for some of the player features.

General operation:

- Press MENU OSD on the remote control.
- Select  in the menu bar:
→ The Personal Preferences menu appears.
- Use the ◀ ▶ ▽ ▲ keys to toggle through the menus, submenus and submenu options.
→ When a menu item is selected, the cursor keys (on the remote control) to operate the item are displayed next to the item.
- Press OK to confirm and return to the main menu.
The following items can be adapted:


Picture

– TV Shape

See 'Initial Setup'

– Black level shift (NTSC only)

Select ON for adapting the color dynamics to obtain richer contrasts.

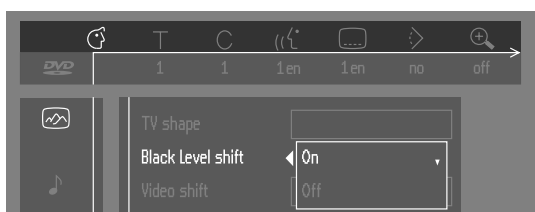


– Video shift

The factory centers the video on your screen. Use this setting to personalize the position of the picture on your TV by scrolling it to the left or right.



– Color settings (SCART connection)

You can select one of five predefined sets of color settings (SCART connection only) and one set (Personal) which you can define yourself.

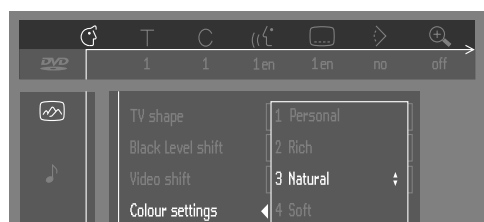

– Personal color

Allows you to fine-tune the selected color settings (SCART connection only) saturation, brightness and contrast.

Sound

– Digital output

Factory setting: ALL. This means that both coaxial and optical outputs are switched on. If you are not connecting equipment with a digital input, change the setting to OFF. If your equipment doesn't include a digital multi-channel decoder, set the digital output to PCM (Pulse Code Modulation). Both coaxial and optical outputs are switched on.

– Analog output

Select Stereo, Dolby Surround or 3D sound.

– Night Mode

Optimizes the dynamics of the sound with low volume playback.

– Karaoke vocal

Put this setting to ON only when a multi-channel karaoke DVD is being played. The karaoke channels on the disc will then be mixed into a normal stereo sound.

Language

Select the required Menu, Audio and Subtitle language. See 'Initial Setup'.

Audio language and Subtitle language can also be adapted via the Menu bar on the screen.

Features

– Access Control


Access Control contains the following features:

Child Lock - When Child Lock is set to ON, a 4-digit code needs to be entered in order to play discs.

Parental control - Allows the conditional presentation of DVDs containing Parental Control information (see 'Access Control').


– Status Window

Displays the current status of the player and is displayed with the menu bar. When disc playback is stopped, it is displayed with the 'Temporary Feedback Field' in the default screen. See 'On-Screen Display' information; Factory setting is ON. Select OFF to suppress display of the Status Window.

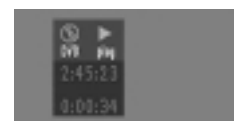

- **Bit Rate Indicator**

When activated, the bit rate for video, audio as well as total bit rate is displayed. This is only applicable during playback of DVD and SVCD discs

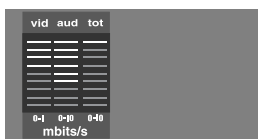

- **Beeper**

The beeper can be set to ON or OFF.


Access control; child lock (DVD and VCD)

Activating/deactivating the child lock

- 1** When disc playback is stopped, select **ACCESS CONTROL** in the features menu using the ▼/▲ keys.
- 2** Enter a 4-digit code of your own choice.
- 3** Enter the code a second time.
- 4** Move to "**CHILD LOCK**" using the ▼/▲ keys.
- 5** Move to **LOCK/UNLOCK** using the ► key.
- 6** Select **LOCK** using the ▼/▲ keys.
- 7** Press OK or ◀ to confirm, then press ◀ again to exit the menu.
→ Now unauthorized discs will not be played unless the 4-digit code is entered.
- 8** Select **UNLOCK** to deactivate the **CHILD LOCK**.

Note: Confirmation of the 4-digit code is necessary when:

- The code is entered for the very first time (see above),
- The code is changed (see 'Changing the 4-digit code'),
- The code is cancelled (see 'Changing the 4-digit code').

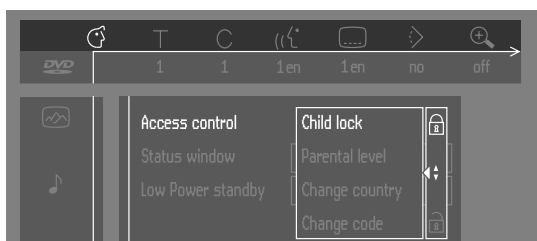


Authorizing discs




- Insert the disc. See 'Loading disc'.
→ The 'child protect' dialog will appear:
You will be asked to enter your secret code for 'Play Once' or 'Play Always.' If you select 'Play Once', the disc can be played as long as it is in the player and the player is ON. If you select 'Play Always', the disc will become child safe (authorized) and can always be played, even if the Child Lock is set to ON.

Notes:

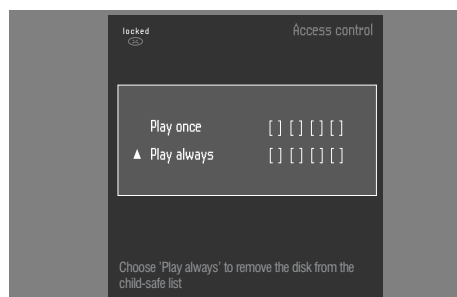- The player memory maintains a list of 50 authorized ('Child safe') disc titles. A disc should be placed in the list when 'Play Always' is selected in the 'child protect' dialog.
- Each time a 'child safe' disc is played, it will be placed on top of the list. When the list is full and a new disc is added, the last disc in the list will be removed from the list.
- Double sided DVDs may have a different ID for each side. In order to make the disc 'child safe', each side has to be authorized.
- Multi-volume VCDs may have a different ID for each volume. In order to make the complete set 'child safe', each volume has to be authorized.




Deauthorizing discs

- Insert the disc. See 'Loading disc'.
→ Playback starts automatically.
- Press  while  is visible.
→ The  will appear and the disc is now deauthorized.

Access control; Parental control (DVD-Video only)

Movies on DVDs may contain scenes not suitable for children. Therefore, disc may contain 'Parental Control' information which applies to the complete disc or to certain scenes on the disc. These scenes are rated from 1 to 8, and alternative, more suitable scenes are available on the disc. Ratings are country dependent. The 'Parental Control' feature allows you to prevent discs from being played by your children or to have certain discs played with alternative scenes.

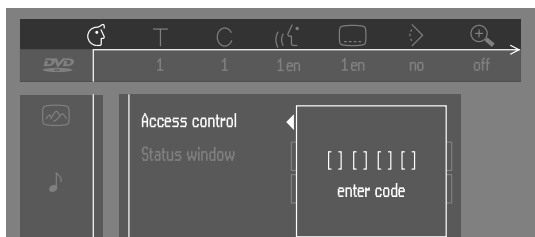

Activating/Deactivating Parental Control

- 1 When disc playback is stopped, select **ACCESS CONTROL** in the features menu using the ▼/▲ keys.
- 2 Enter your 4-digit code. If necessary, enter the code a second time.
- 3 Move to Parental Control using the ▼/▲ keys.
- 4 Move to **VALUE ADJUSTMENT** (1-8) using the ► key.
- 5 Then use the ▼/▲ keys or the numerical keys on the remote control to select a rating from 1 to 8 for the disc inserted.


Rating 0 (displayed as '—'):

Parental Control is not activated. The Disc will be played in full.

Ratings 1 to 8:

The disc contains scenes not suitable for children. If you set a rating for the player, all scenes with the same rating or lower will be played. Higher rated scenes will not be played unless an alternative is available on the disc. The alternative must have the same rating or a lower one. If no suitable alternative is found, play will stop and the 4-digit code has to be entered.

- 6 Press OK or ◀ to confirm, then press ◀ again to exit the menu.

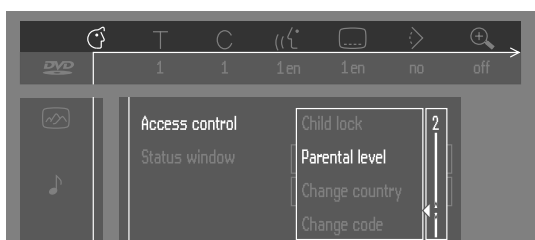

Country

- 1 When disc playback is stopped, select **ACCESS CONTROL** in the features menu using the ▼/▲ keys.
- 2 Enter the 4-digit code.
- 3 Move to **CHANGE COUNTRY** using the ▼ key.
- 4 Press the ► key.
- 5 Select a country using ▼/▲.
- 6 Press OK or ◀ to confirm, then press ◀ again to exit the menu.

Changing the 4-digit code

- 1 When disc playback is stopped, select **ACCESS CONTROL** in the features menu using the ▼/▲ keys.
- 2 Enter the old code.
- 3 Move to **CHANGE CODE** using the ▼ key.
- 4 Press the ► key.
- 5 Enter the new 4-digit code.
- 6 Enter the code a second time and reconfirm by pressing OK.
- 7 Press ◀ to exit the menu.

Note:

— If you forget your 4 digit code, it can be cancelled by pressing ■ four times in the 'Access Control' dialog. You can then enter a new code (twice!) as described above.

Parental Control Disclaimer

This DVD player features the **PARENTAL CONTROL** system which is intended to activate when playing DVD discs furnished with certain software coding. This is according to technical standards adopted by the set maker and disc content industries.

Please note that the **PARENTAL CONTROL** system will not operate a DVD disc which is not furnished with the appropriate software coding. Also note that at the time of release of this DVD player, certain aspects of the technical standards had not been settled between set makers and the disc industries.

On this basis Philips cannot guarantee the functioning of **PARENTAL CONTROL** system and denies any liability associated with unintended watching of disc content. If in doubt, please make sure the disc plays according to your **PARENTAL CONTROL** settings before you allow children access.

Operation

Loading discs

- 1 Press OPEN/CLOSE on the front of the player. The disc tray opens.
- 2 Load your chosen disc in the tray, label side up (also when a double sided DVD is inserted). Make sure it is sitting properly in the correct recess.
- 3 Press OPEN/CLOSE, to close the tray.
→ **READY** appears in the status window and on the player display, and playback starts automatically.

Note:

– If 'Child Lock' is set to ON and the disc inserted is not in the 'child safe' list (not authorized), the 4-digit code must be entered and/or the disc must be authorized (see 'Access Control').

Playing a DVD-video disc



Playing a title

- After inserting the disc and closing the tray, playback starts automatically and the status window and the player display show the type of disc loaded, as well as information about the disc's contents and playing time.
The disc may invite you to select an item from a menu. If the selections are numbered, press the appropriate numerical key; if not, use the **▼/▲**, **◀▶** keys to highlight your selection, then press **OK**.
- The currently playing title and chapter number are displayed in the menu bar and the player display. The elapsed playing time is shown in the status window and the player display.
- Play may stop at the end of the Title, and the player may return to the DVD menu. To go on to the next title, press **▶**.
- To stop play at any other time, press **■**.
→ The default screen will appear, giving information about the current status of the player.
- You can resume play from the point at which you stopped play. Press **▶**; when you see the Resume icon **▶** on the screen, press **▶** again.
→ The RESUME feature applies not only to the disc in the player, but also to the last four discs you have played. Simply reload the disc, and press **▶**; when you see the Resume icon **▶** on the screen, press **▶** again.

Note:


– Since it is usual for DVD movies to be released at different times in different regions of the world, all players have region codes.
– Discs can have an optional region code. If you load a disc of a different region code into your player, you will see the region code notice on the screen.
– The disc will not play and should be removed from the player.

Playing a Video CD



Playing a disc

- After inserting the disc and closing the tray, playback starts automatically and the status window and the player display show the type of disc loaded, as well as information about the disc's contents and playing time.
- The disc may invite you to select an item from a menu. If the selections are numbered, press the appropriate numerical key.
- The currently playing track number is displayed in the menu bar and the player display. The elapsed playing time is shown in the status window and the player display.
- To stop play at any time, press **■**.
→ The default screen will then appear.
- You can resume play from the point at which you stopped play. Press **▶**; when you see the Resume icon **▶** on the screen, press **▶** again.
→ The RESUME feature applies not only to the disc in the player, but also to the last four discs you have played. Simply reload the disc, and press **▶**; when you see the Resume icon **▶** on the screen, press **▶** again.

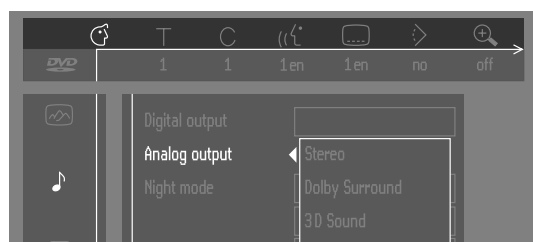

General features


Note:

– Unless stated otherwise, all operations described are based on remote control operation. A number of operations can also be carried out via the menu bar on the screen (see 'Menu bar operation').

Moving to another title/track


When a disc has more than one title or track (which you can see from both the menu bar and the player display), you can move to another title as follows:

- Press **T-C (TITLE/TRACK)**, then press **▶|** briefly during play to select the next title/track.
- Press **T-C (TITLE/TRACK)**, then press **|◀** briefly during play to return to the beginning of the current title/track. Press **|◀** twice briefly to step back to the previous title/track.

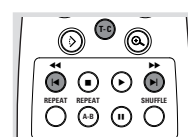

Moving to another chapter/index

When a title on a disc has more than one chapter or a track has more than one index (which you can see from the player display and on the menu bar), you can move to another chapter/index as follows:

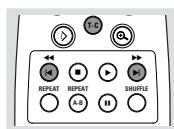


- Press **▶** briefly during play to select the next chapter/index.
- Press **◀** briefly during play to return to the beginning of the current chapter/index. Press **◀** twice briefly to step back to the previous chapter/index.
- To go directly to any chapter or index, select T-C (**CHAPTER/INDEX**), then enter the chapter/index number using the numerical keys (0-9).

Note:

– If the number has more than one digit, press the keys in rapid succession.

Still Picture and Frame-by-frame playback


- Select **◀▶** (**PICTURE BY PICTURE**) in the menu bar.
- Use the **▼** key to enter the picture by picture menu.
- The player will now go into **PAUSE** mode.
- Use the cursor keys **◀▶** to select the previous or next picture frame.
- To exit **PICTURE BY PICTURE** mode, press **▶** or **▲**.

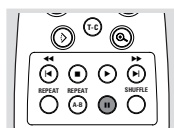

You can also step forward by pressing **II** repeatedly on the remote control.

Search


- Select **⏮⏭** (**FAST MOTION**) in the menu bar.
- Use the **▼** keys to enter the **FAST MOTION** menu.
- Use the **◀▶** keys to select the required speed: -32, -8 or -4 (backward), or +4, +8, +32 (forward).
- Select 1 to play at normal speed again.
- To exit **FAST MOTION** mode, press **▶** or **▲**.

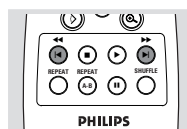

To search forward or backward through different speeds, you can also hold down **◀◀** or **▶▶**.

Repeat

DVD-Video Discs - Repeat chapter/title/disc

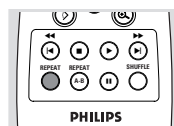

- To repeat the currently playing chapter, press REPEAT.
- **REPEAT CHAPTER** appears on the player display.
- To repeat the title currently playing, press REPEAT a second time.
- **REPEAT TITLE** appears on the display.
- To repeat the entire disc, press REPEAT a third time.
- **REPEAT** appears on the display.
- To exit Repeat mode, press REPEAT a fourth time.


Video CDs - Repeat track/disc

- To repeat the track currently playing, press REPEAT.
- **REPEAT TRACK** appears on the player display.
- To repeat the entire disc, press REPEAT a second time.
- **REPEAT** appears on display and screen.
- To exit Repeat mode, press REPEAT a third time.

Repeat A-B

To repeat a sequence in a title:

- Press REPEAT A-B at your chosen starting point;
- **A-** appears briefly on the screen.
- Press REPEAT A-B again at your chosen end point;
- **A-B REPEAT** appears briefly on the display, and the repeat sequence begins. (**A-B REPEAT** is displayed on the front panel of the player)
- To exit the sequence, press REPEAT A-B.

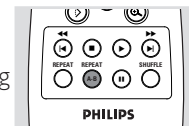


Shuffle

DVD-Video discs

This shuffles the playing order of chapters within a title, if the title has more than one.

- Press SHUFFLE during play.
- **SHUFFLE** appears on the screen for about 2 seconds.
- To return to normal play, press SHUFFLE again.

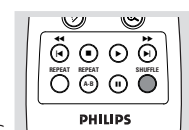

Video CDs

 
This shuffles the playing order of the tracks, if the disc has more than one.

- Press SHUFFLE during play.
- **SHUFFLE** appears on the screen for about 2 seconds.
- To return to normal play, press SHUFFLE again.

Time search


The Time Search function allows you to start playing at any chosen time on the disc.

- Select **⌚** (**TIME SEARCH**) in the menu bar.
- Press **▼**.
- The player will now go into **PAUSE** mode.
- A time edit box appears on the screen, showing the elapsed playing time of the current disc.
- Use the digit keys to enter the required start time. Enter hours, minutes and seconds from left to right in the box.
- Each time an item has been entered, the next item will be highlighted.
- Press OK to confirm the start time.
- The time edit box will disappear and play starts from the selected time position on the disc.




Zoom

The Zoom function allows you to enlarge the video image and to pan through the enlarged image.

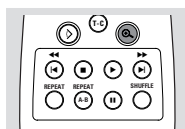

- Select **⊕** (**ZOOM**).
- Press **▼/▲** to activate the **ZOOM** function and select the required zoom factor: 1.33 or 2 or 4.
→ The player will go into Pause mode.
→ The selected zoom factor appears below the Zoom icon in the menu bar and 'Press OK to pan' appears below the menu bar.
→ The picture will change accordingly.
- Press OK to confirm the selection.
→ The panning icons appear on the screen: **◀▶▼▲** and OK.
- Use the **◀▶▼▲** keys to pan across the screen.
- When OK is pressed only the zoomed picture will be shown on the screen.
- If you wish to zoom at any moment, press **⊕** (**ZOOM**) and select the required zoom factor as described above.
- To exit **ZOOM** mode:
 - Press **▶**.
 - Playback will resume.
 - Press STOP, MENU OSD.

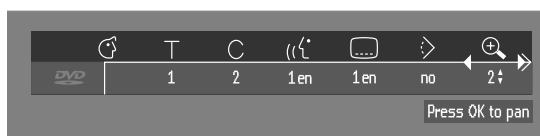

FTS-Video


- The FTS-Video function allows you to store your favorite titles and chapters (DVD) and favorite tracks and indexes (VCD) for a particular disc in the player memory.
- Each FTS program can contain 20 items (titles, chapters).
- Each time an FTS program is played it will be placed on top of the list. When the list is full and a new program is added, the last program in the list will be removed from the list.
- The selections can be called up and played at any time.

Storing a FTS-Video Program

- In STOP mode, select **VIDEO FTS** ☒ in the menu bar.
- Press **▼** to open the menu.
→ The **VIDEO FTS** menu appears.
- Press **▶** or **◀** or FTS to select ON or OFF.

Storing titles/tracks

- Press **▼** to select **TITLES**.
- Use **▶** and **◀** to select the required title.
- Press OK if you wish to store the entire title.
→ The title number will be added to the list of selections.

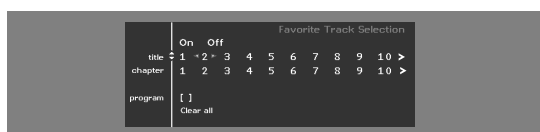

Storing chapters/indexes

- Press **▼** on the selected title number.
→ The title number will be marked and the highlight moves to the first available chapter number for this title.
- Use **▶** and **◀** to select the required chapter number.
- Press OK to confirm the selection.
→ The title/chapter selection will be added to the list of selections.
- Press MENU OSD to exit the **VIDEO FTS** ☒ menu.

Erasing a FTS-Video Program

- In STOP mode, select **VIDEO FTS** ☒ in the menu bar.
- Use **▼** to select **PROGRAM**.
- Use **▶** and **◀** to select the required selection number.
- Press OK to erase the selection.
- Press MENU OSD to exit.

If you wish to erase all selections:

- In STOP mode, select **VIDEO FTS** ☒ in the menu bar.
- Use **▼** to select **CLEAR ALL**.
- Press OK.
→ All selections will now be erased.
- Press MENU OSD to exit.


Special DVD features

Checking the contents of DVD-Video discs: Menus

For titles and chapters, selection menus may be included on the disc. The DVD's menu feature allows you to make selections from these menus. Press the appropriate numerical key; or use the **▼**, **▲**, **▶**, **◀** keys to highlight your selection, then press OK.

Title menus

- Press MENU DVD.
→ If the current title has a menu, the menu will appear on the screen. If no menu is present in the title, the disc menu will be displayed.
- The menu can list camera angles, spoken language and subtitle options, and chapters for the title.
- To remove the title menu, press MENU DVD again.

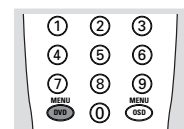

Disc menu

- Press T-C then press MENU DVD.
→ The disc menu is displayed.
- To remove the disc menu, press T-C, then press MENU DVD.

Camera Angle

 
If the disc contains sequences recorded from different camera angles, the angle icon appears, showing the number of available angles and the angle being shown currently. You can then change the camera angle if you wish.

- Use the ▼/▲ keys to select the required angle in the angle icon.
→ After a small delay, play changes to the selected angle. The angle icon remains displayed until multiple angles are no longer available.



Changing the audio language

- Select (🔊) (**AUDIO**) in the menu bar.
- Press (🔊) or ▼/▲ repeatedly to see the different languages.



Subtitles

- Select (📄) (**SUBTITLE**) in the menu bar.
- Press (📄) or ▼/▲ repeatedly to see the different subtitles.




Special VCD-Features

Playback Control (PBC)

- Load a Video CD with PBC and press ►.
- Go through the menu with the keys indicated on the TV screen until your chosen passage starts to play. If a **PBC** menu consists of a list of titles, you can select a title directly.
- Enter your choice with the numerical keys (0-9).
- Press RETURN to go back to the previous menu.
- You may also set to **PBC OFF** under Personal Preferences.


Playing an audio CD

- After loading the disc, playback starts automatically.
- If the TV is on, the Audio CD screen appears.
- The number of tracks and the total playing time will be shown on the screen.
- During play, the current track number and its elapsed playing time will be shown on the screen and on the player display.
- Playback will stop at the end of the disc.
- To stop play at any other time, press ■.

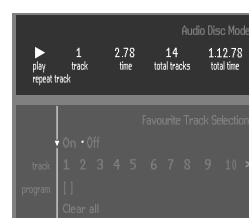


Pause

- Press II during play.
- To return to play, press ►.

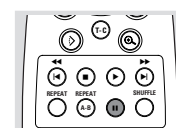


Search

- To search forward or backward through the disc at four times normal speed, hold down ◀◀ or ▶▶ for about one second during play.
→ Search begins, and sound is partially muted.
- To step up to eight times the normal speed, press ◀◀ or ▶▶ again.
→ Search goes to eight times the speed, and the sound is muted.
- To return to four times the normal speed, press ◀◀ or ▶▶ again.
- If the TV is on, search speed and direction are indicated on the screen each time ◀◀ or ▶▶ is pressed.
- To end the search, press ► to resume playback or ■ to stop.

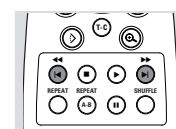


Moving to another track

- Press ►I briefly during play to go to the next track.
- Press I◀ briefly during play to return to the beginning of the current track. Press I◀ twice briefly to step back to the previous track.
- To go directly to any track, enter the track number using the numerical keys (0-9).

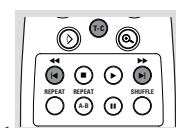


Shuffle

- Press SHUFFLE during play.
→ The order of the tracks is changed.
- To return to normal play, press SHUFFLE again.

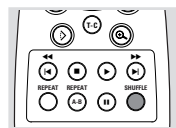

Repeat track/disc


- To repeat the track currently playing, press REPEAT.
→ **REPEAT TRACK** appears on the display.
- To repeat the entire disc, press REPEAT a second time.
→ **REPEAT** appears on the display.
- To exit Repeat mode, press REPEAT a third time.

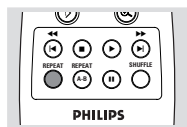

Repeat A-B


To repeat a sequence:

- Press REPEAT A-B at your chosen starting point;
→ **A-** appears on the player display.
- Press REPEAT A-B again at your chosen end point;
→ **A-B** appears on the display, and the sequence begins to play repeatedly.
- To exit the sequence, press REPEAT A-B again.

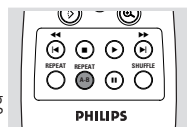

FTS Program

- FTS Program allows you to store your favorite tracks for a particular disc in the player memory.
- Each FTS Program can contain 20 tracks.

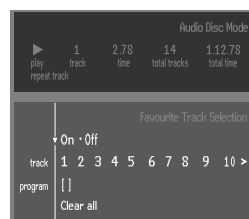

Storing an FTS Program

- 1 Load a disc and stop playback.
- 2 Use ▼ to go to the list of available tracks.
- 3 Use ► or ◀ to select tracks from the list.
To go directly to any track, enter the track number using the numerical keys (0-9).
- 4 Store each track by pressing OK.
→ The track numbers will be added to the list of selected tracks.
→ The number of tracks and the playing time of the program will be shown on the screen and the player display.

When your FTS Program is complete, press ► to start play, or ▲ to go back to Stop mode. In either case, the FTS Program will be automatically memorized.

Switching FTS ON/OFF

- 1 Use ▲ ▼ to move to the top.
- 2 Use ► or ◀ to select either ON or OFF.

Erasing a track from an FTS Program

- 1 Use ▼ to go to the list of selected tracks.
- 2 Use ► and ◀ to select the track number you wish to erase.
- 3 Press OK.
→ The track number will be erased from the list of selected tracks.

Erasing the complete program

- 1 Use ▼ to select **CLEAR ALL**, then press OK.
→ The complete FTS Program for the disc will be erased.

Before Requesting Service

If it appears that the DVD-Video player is faulty, first consult this checklist. It may be that something has been overlooked. Under no circumstances attempt to repair the system yourself; this will invalidate the warranty.

Look for the specific symptom(s). Then perform only the actions listed to remedy the specific symptom(s).

Symptom	Remedy
No power	<ul style="list-style-type: none">● Make sure the mains cord (AC) is properly connected.● Check if there is power at the AC outlet by plugging in another appliance.
No picture	<ul style="list-style-type: none">● Check if the TV is switched on.● Check the video connection.
Distorted picture	<ul style="list-style-type: none">● Check the disc for fingerprints and clean with a soft cloth, wiping from center to edge.● Sometimes a small amount of picture distortion may appear. This is not a malfunction.
Completely distorted picture or no color with player menu.	<ul style="list-style-type: none">● If the picture is distorted completely or if the picture rolls vertically, make sure the NTSC/PAL setting at the DVD player matches the video signal of your television.● If your TV video signal is NTSC, select the NTSC setting at the DVD player.● If your video signal is PAL, select the PAL setting - see NTSC/PAL SETTINGS.
Distorted or Black/White picture with DVD or Video CD.	<ul style="list-style-type: none">● The disc format does not match your TV's video signal (PAL/NTSC).
No sound	<ul style="list-style-type: none">● Check audio connections.● If you are using a HiFi amplifier, try another sound source.
Distorted sound from HiFi amplifier.	<ul style="list-style-type: none">● Check to make sure that no audio connections are made to the amplifier phono input.
No audio at digital output.	<ul style="list-style-type: none">● Check the digital connections.● Check the settings menu to make sure the digital output is set to ALL or PCM.● Check if the audio format of the selected audio language matches your receiver capabilities.
Disc can't be played.	<ul style="list-style-type: none">● Ensure the disc label is facing up.● Clean the disc.● Check if the disc is defective by trying another disc.● Check to see if the disc is defective, badly scratched or warped (not flat)
No return to start-up screen when disc is removed.	<ul style="list-style-type: none">● Reset by switching the player off, then on again.● Check to see if the program requires another disc to be loaded.
The player does not respond to the remote control.	<ul style="list-style-type: none">● Aim the remote control directly at the sensor on the front of the player.● Remove any obstacles between the player and the remote control.● Inspect or replace the batteries in the remote control.
Buttons do not work.	<ul style="list-style-type: none">● In order to completely reset the player, unplug the AC cord from the AC outlet. (Please ensure that the set is not in Initial Setup mode)
Player does not respond to all operating commands during playback.	<ul style="list-style-type: none">● Operations are not permitted by the disc. Refer to the instructions of the disc.
DVD-Video player cannot read CDs/DVDs	<ul style="list-style-type: none">● Use a commonly available cleaning CD/DVD to clean the lens before correctly taking the DVD-Video player to be repaired.

Specification

PLAYBACK SYSTEM

DVD-Video
Video CD
CD (CD-R and CD-RW)

OPTICAL READOUT SYSTEM

Lasertype	Semiconductor AlGaAs
Numerical Aperture	0.60 (DVD) 0.45 (VCD/CD)
Wavelength	650 nm (DVD) 780 nm (VCD/CD)

DVD DISC FORMAT

Medium	Optical Disc
Diameter	12cm (8cm)
Playing time (12cm)	One layer 2.15 h* Dual layer 4 h* Two side 4.30 h* Single layer Two side 8 h* Dual layer

VIDEO FORMAT

DA Converter	10 bits
Signal handling	Components
Digital Compression	MPEG2 for DVD, MPEG1 for VCD

TV STANDARD (PAL/50Hz) (NTSC/60Hz)

Number of lines	625	525
Playback	Multistandard	(PAL/NTSC)

DVD

Horiz. Resolution	720 pixels**	720 pixels**
Vertical Resolution	576 lines	480 lines

VCD

Horiz. Resolution	352 pixels	352 pixels
Vertical Resolution	288 lines	240 lines

VIDEO PERFORMANCE

Video output	1 Vpp into 75 ohm
S-Video output	Y: 1 Vpp into 75 ohm C: 0.3 Vpp into 75 ohm
RGB output	0.7 Vpp into 75 ohm
Black Level Shift	On/Off
Video Shift	Left/Right

AUDIO FORMAT

Digital	MPEG DTS/AC-3 PCM	Compressed Digital 16, 20, 24 bits fs, 44.1, 48, 96 kHz
---------	-------------------------	---

Analog Sound Stereo

Dolby Pro Logic downmix from multi-channel sound

3D Sound for virtual 5.1 channel sound on 2 speakers (AC-3)

AUDIO PERFORMANCE

DA Converter	24 bits
DVD	fs 96 kHz 4 Hz - 44 kHz fs 48 kHz 4 Hz - 22 kHz
Video CD	fs 44.1 kHz 4 Hz - 22 kHz
CD	fs 44.1 kHz 4 Hz - 20 kHz
Signal-Noise (1kHz)	103 dB
Dynamic Range (1kHz)	98 dB
Crosstalk (1kHz)	115 dB
Distortion and Noise (1kHz)	95 dB
Headphone	30mW at 32 Ohm load, headphone imp. 8-2k Ohm

* typical playing time for movie with 2 spoken languages and 3 subtitle languages.

** equivalent to 500 lines on your TV

CONNECTIONS

SCART	2 SCART
S-Video Output	Mini DIN, 4 pins
Video Output	Cinch (yellow)
Audio L+R output	Cinch (white/red)
Digital Output	1 coaxial, 1 optical IEC958 for CDDA / LPCM IEC1937 for MPEG1, MPEG2 and AC-3 DTS
Cinematic	on SCART
Headphone	6.3 mm Jack

CABINET

Dimensions (w x h x d)	435 x 92 x 320mm
Weight	Approx. 4 Kg

GENERAL FUNCTIONALITY

Stop / Play / Pause
Fast Forward / Backward
Time search
Step Forward / Backward
Title / Chapter / Track Select
Next / Previous
Repeat (Chapter / Title / All) or (Track / All)
A-B Repeat
Shuffle
Enhanced ease of use graphical interface
Perfect Still with digital multi-tap filter
Zoom (x1.33, x2, x4) with picture enhancement
Personal Color settings (Smart Picture)
Cinematic interconnection for plug&play
3D Sound
Virtual Jog Shuttle
Audio and video bit rate indicator
Beeper

DVD FUNCTIONALITY

Multi-angle Selection
Audio Selection (1 out of max. 8 languages)
Subtitles Selection (1 out of max. 32 languages)
Aspect Ratio conversion (16:9, 4:3 Letterbox, 4:3 Pan Scan)
Parental Control and Disk Lock
Disc Menu support (Title Menu and Root Menu)
Resume (5 discs) after stop / standby
Screen Saver (Dim 75% after 15 min.)
Programming Titles/chapters with Favorite Selection

VIDEO CD FUNCTIONALITY

Playback Control for VCD 2.0 discs
Disc Lock
Resume (5 discs) after stop / standby
Screen Saver (Dim 75% after 15 min.)
Programming Tracks with Favorite Selection

AUDIO CD FUNCTIONALITY

Time Display (Total / Track / Remaining Track Time)
Full audio functionality with remote control
Programming with Favorite Track Selection

Specifications subject to change without prior notice